

NO GO ZONES


Working within track or switching requires a permit to work

TRAFFIC PERMIT

Working within tram proximity requires a traffic management plan and Yarra Trams approval of your management plan

SCAFFOLDING NO GO ZONE

ANYWHERE ABOVE AND WITHIN 3.0M
EACH SIDE OR BELOW TRAMWAY
OVERHEAD POWER LINES

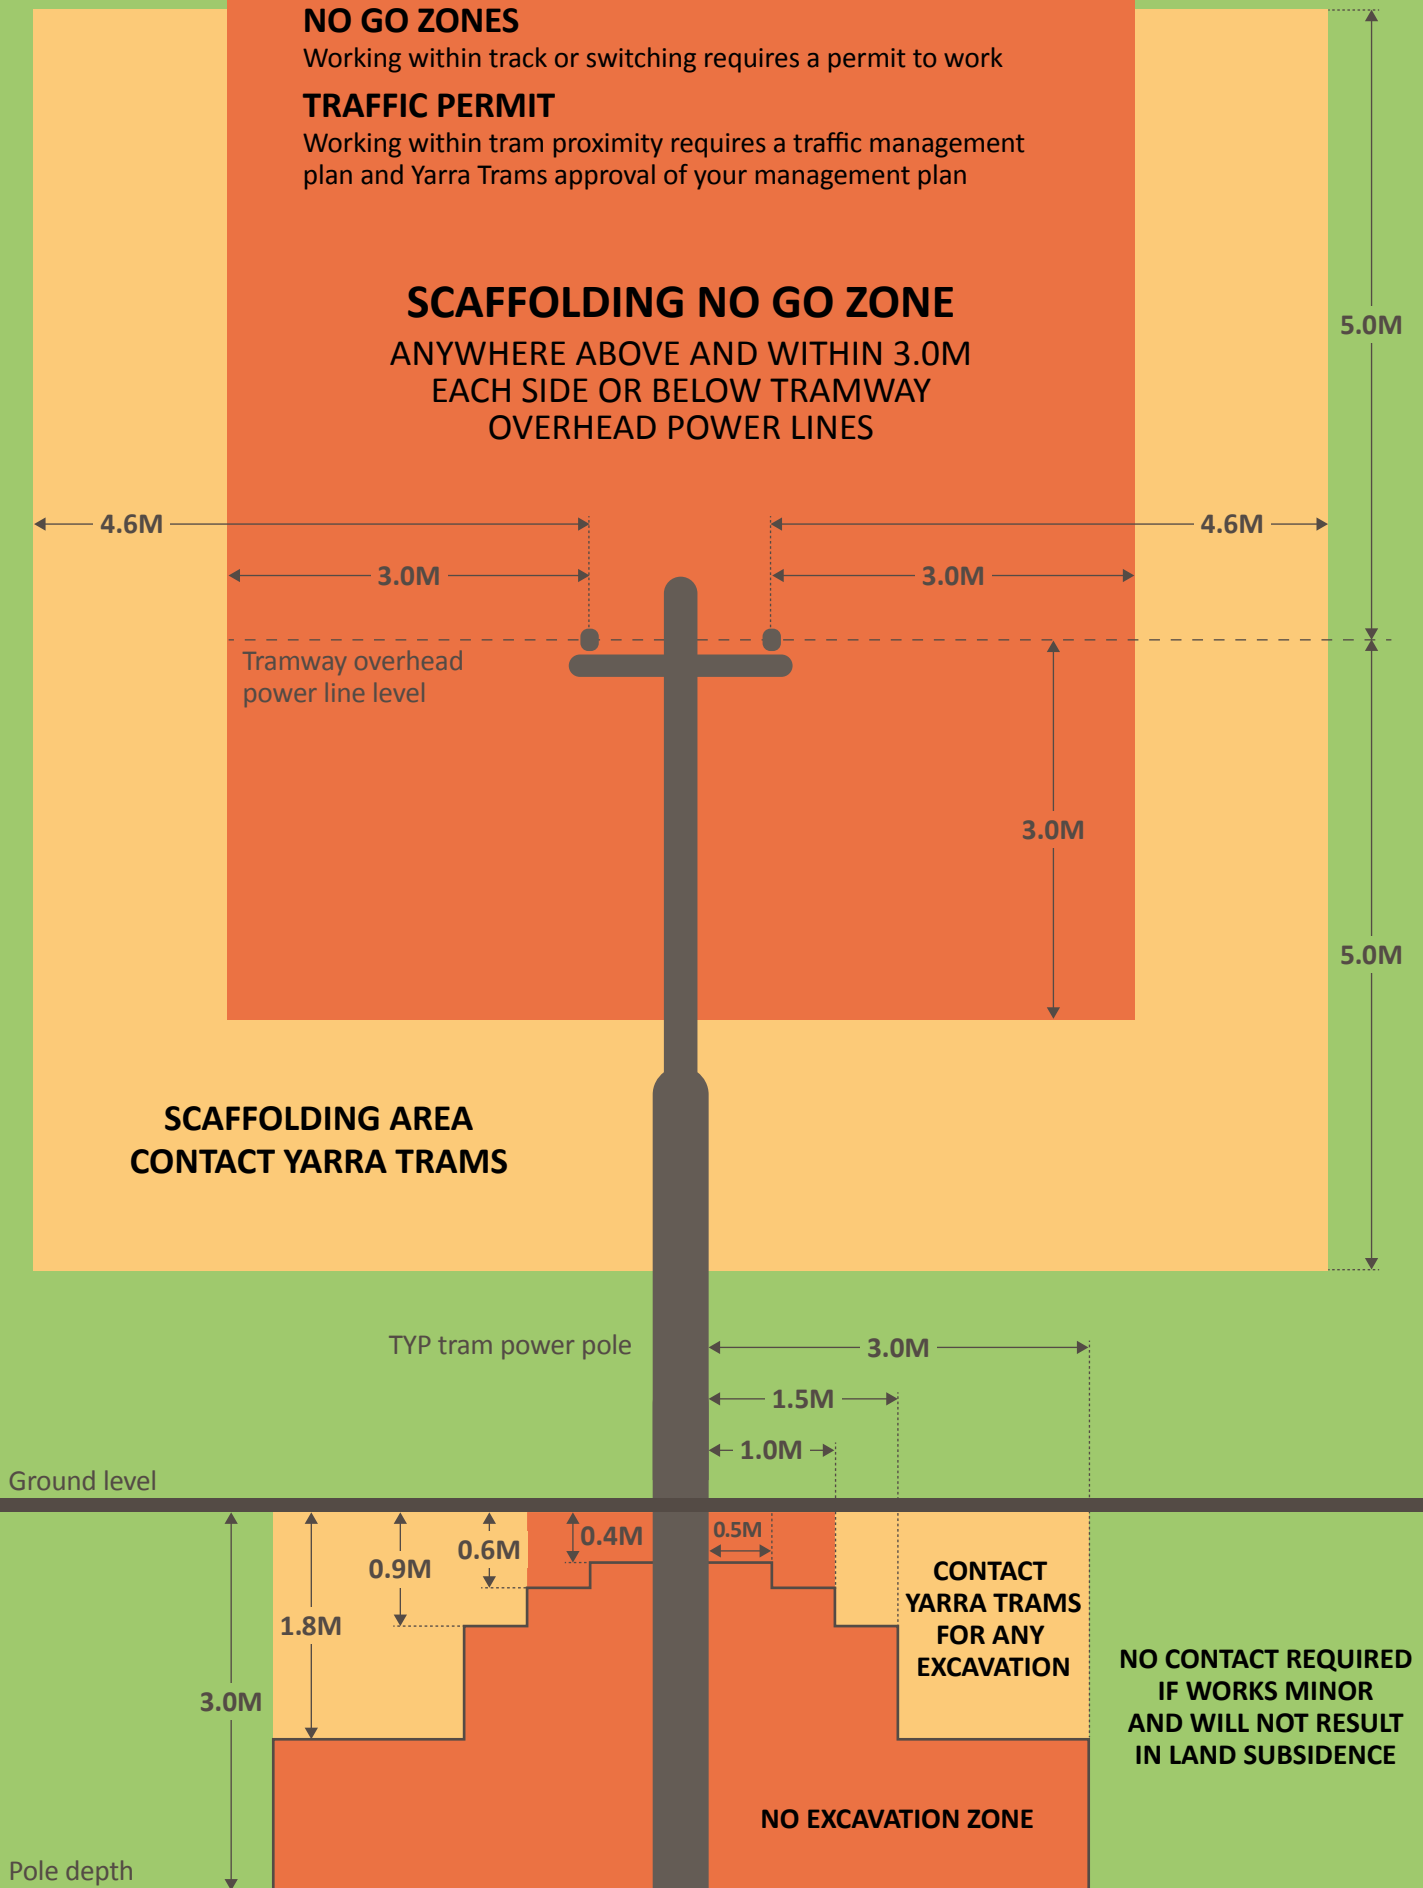

NOTE:

1. These are general guides for high risk zones in and around tram infrastructure.
2. That Yarra Trams underground assets are also installed outside these zones. Check with MOCS.
3. Overhead powerline levels are a guide and heights may vary.